

Thule Rapid System Kit 1046

> Instructions

CITROËN Chanson, 3-dr Hatchback, 96-03





CITROËN Chanson, 5-dr Hatchback, 96-03

CITROËN Saxo, 3-dr Hatchback, 96-03


CITROËN Saxo, 5-dr Hatchback, 96-03

PEUGEOT 106, 3-dr Hatchback, 91-04

PEUGEOT 106, 5-dr Hatchback, 92-04

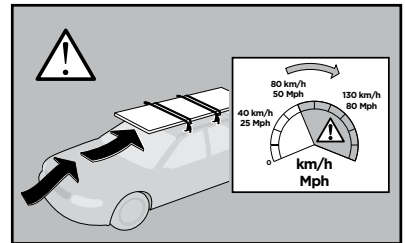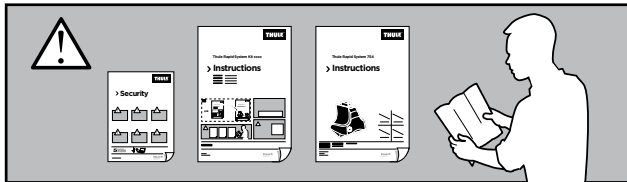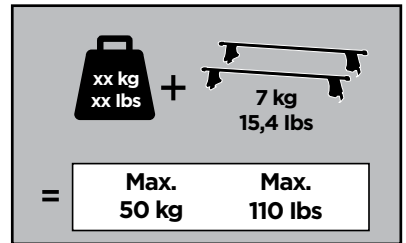
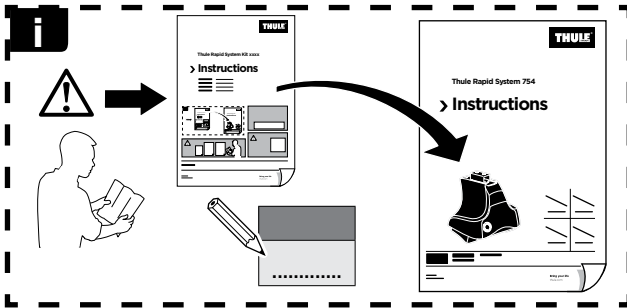


ISO 11154-E

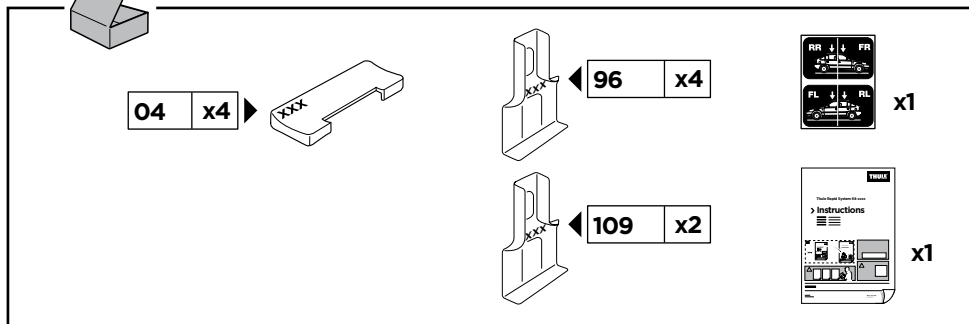



1

	X (scale)	X (mm)	X (inch)
CITROËN Chanson , 3-dr Hatchback, 96-03	21	861	33 ⁷ / ₈
CITROËN Chanson , 5-dr Hatchback, 96-03	21	861	33 ⁷ / ₈
CITROËN Saxo , 3-dr Hatchback, 96-03	21	861	33 ⁷ / ₈
CITROËN Saxo , 5-dr Hatchback, 96-03	21	861	33 ⁷ / ₈
PEUGEOT 106 , 3-dr Hatchback, 91-04	21	861	33 ⁷ / ₈
PEUGEOT 106 , 5-dr Hatchback, 92-04	21	861	33 ⁷ / ₈

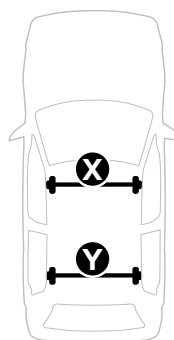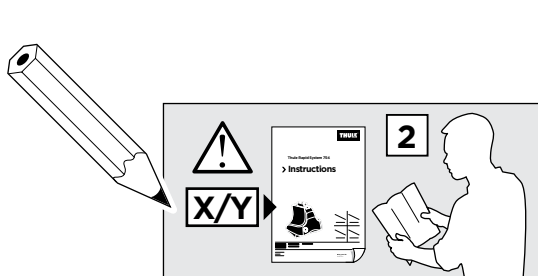

	Y (scale)	Y (mm)	Y (inch)
CITROËN Chanson , 3-dr Hatchback, 96-03	18,5	836	32 ⁷ / ₈
CITROËN Chanson , 5-dr Hatchback, 96-03	20	851	33 ¹ / ₂
CITROËN Saxo , 3-dr Hatchback, 96-03	18,5	836	32 ⁷ / ₈
CITROËN Saxo , 5-dr Hatchback, 96-03	20	851	33 ¹ / ₂
PEUGEOT 106 , 3-dr Hatchback, 91-04	18,5	836	32 ⁷ / ₈
PEUGEOT 106 , 5-dr Hatchback, 92-04	20	851	33 ¹ / ₂



2

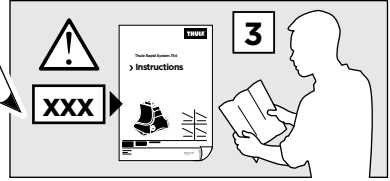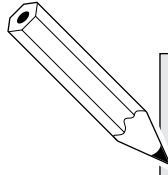

CITROËN Chanson, 3-dr Hatchback, 96-03

CITROËN Saxo, 3-dr Hatchback, 96-03



PEUGEOT 106, 3-dr Hatchback, 91-04

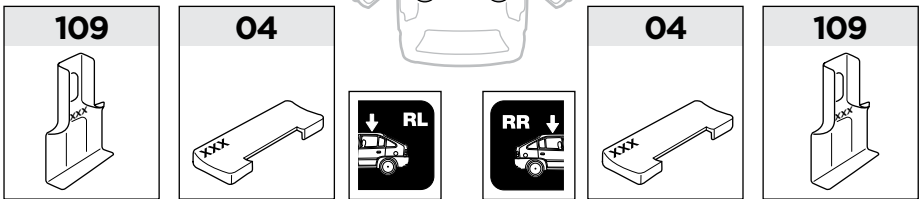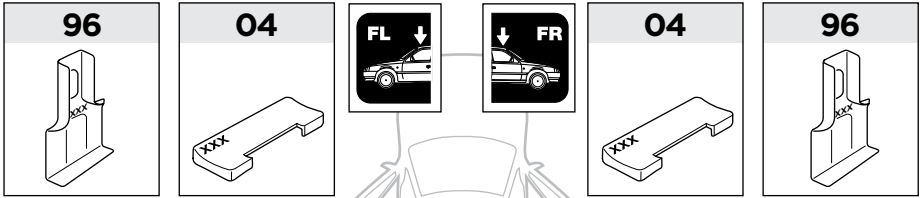



CITROËN Chanson, 5-dr Hatchback, 96-03

CITROËN Saxo, 5-dr Hatchback, 96-03


PEUGEOT 106, 5-dr Hatchback, 92-04

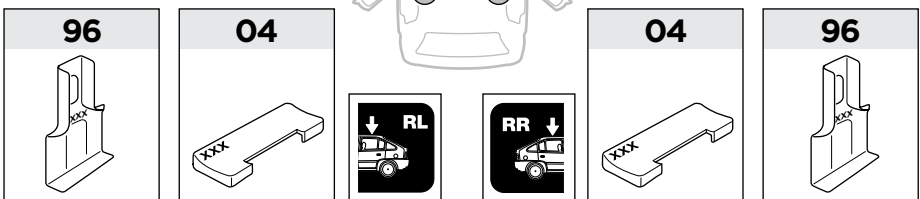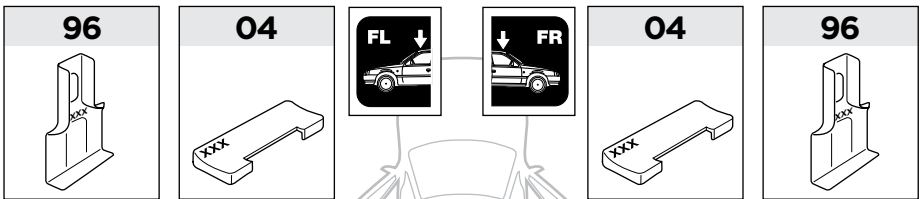


3

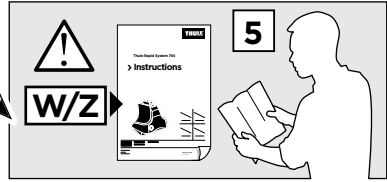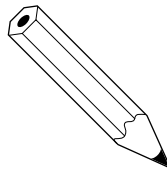

	W (mm)	Z (mm)	W (inch)	Z (inch)
CITROËN Chanson , 3-dr Hatchback, 96-03	220	700	8 5/8	27 1/2
CITROËN Chanson , 5-dr Hatchback, 96-03	220	700	8 5/8	27 1/2
CITROËN Saxo , 3-dr Hatchback, 96-03	220	700	8 5/8	27 1/2
CITROËN Saxo , 5-dr Hatchback, 96-03	220	700	8 5/8	27 1/2
PEUGEOT 106 , 3-dr Hatchback, 91-04	220	700	8 5/8	27 1/2
PEUGEOT 106 , 5-dr Hatchback, 92-04	220	700	8 5/8	27 1/2

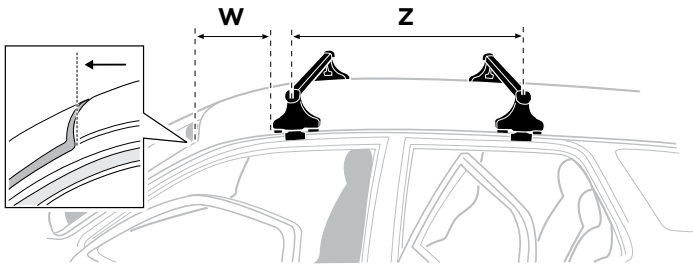

CITROËN / PEUGEOT, 3-dr Hatchback

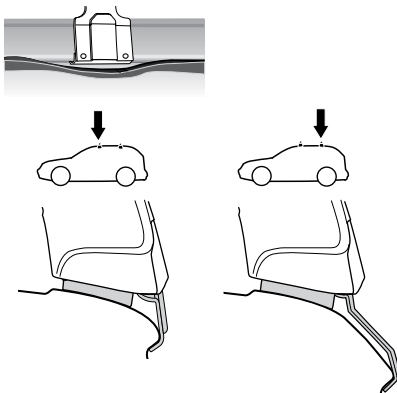

CITROËN / PEUGEOT, 5-dr Hatchback

