
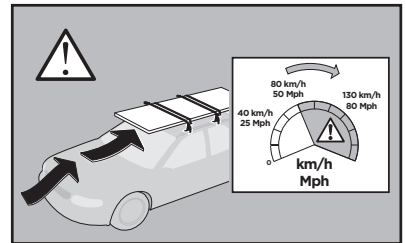
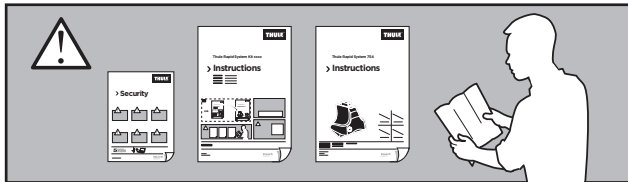
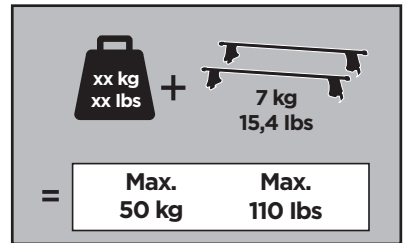


# Thule Rapid System Kit 1581

# > Instructions

RENAULT Mégane, 3-dr Coupé, 09-

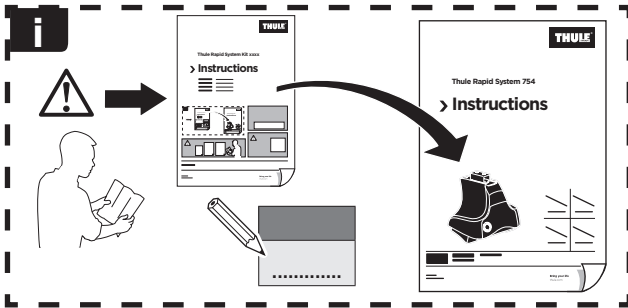

ISO 11154-E


141581

C.2013/0117  
519-1581-01


Bring your life  
thule.com




251 x1



252 x1



328 x2




926 x2



1059 x2



x1





x1



x1

1



	X (scale)	X (mm)	X (inch)
<b>RENAULT Mégane, 3-dr Coupé, 09-</b>	<b>37,5</b>	<b>1026</b>	<b>40 <sup>3</sup>/<sub>8</sub></b>

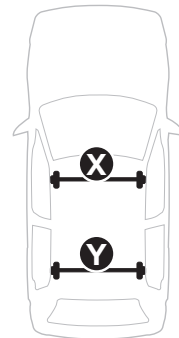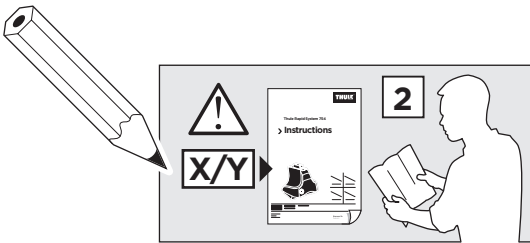


	Y (scale)	Y (mm)	Y (inch)
<b>RENAULT Mégane, 3-dr Coupé, 09-</b>	<b>34,5</b>	<b>996</b>	<b>39 <sup>1</sup>/<sub>4</sub></b>

**2**

**RENAULT Mégane, 3-dr Coupé, 09-**

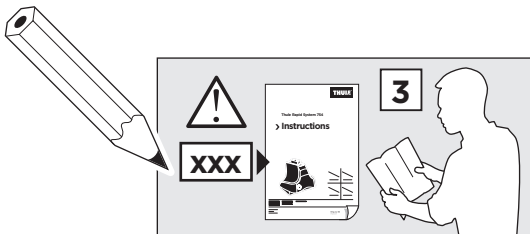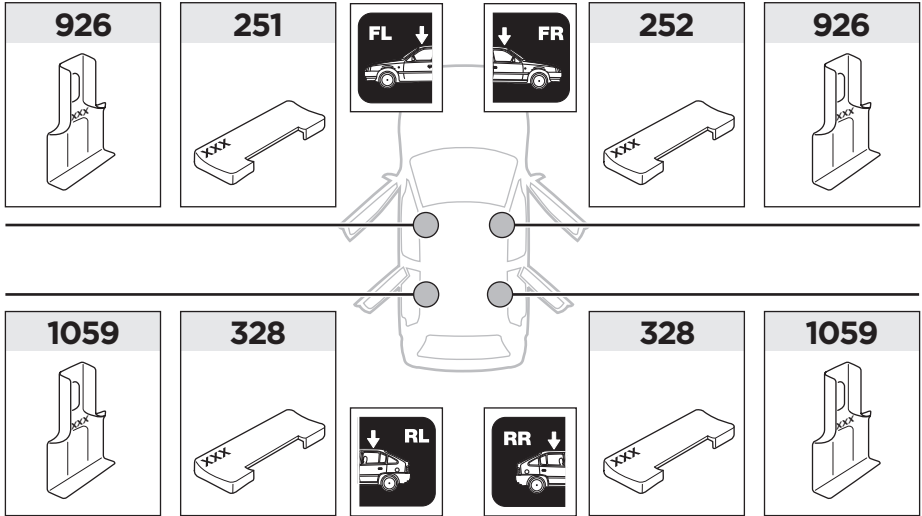

**3**

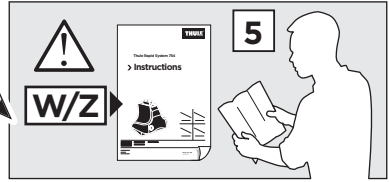

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>RENAULT Mégane, 3-dr Coupé, 09-</b>	<b>165</b>	<b>700</b>	<b>6 1/2</b>	<b>27 1/2</b>

